


Konftel 300W and HiPath 4000 V6 registration help

Installation

1. Initiate the registration process on the HiPath 4000.
2. After that connect another ip-phone and enter *51 phone number and pin (this is the normal procedure to connect a DECT device like a Siemens SL 4 professional)
3. On the Konftel go to MENU > SETTINGS > DECT > REGISTRATION > BASE 1.
4. Enter the PIN code, press OK
5. When asked for PARK code, press OK

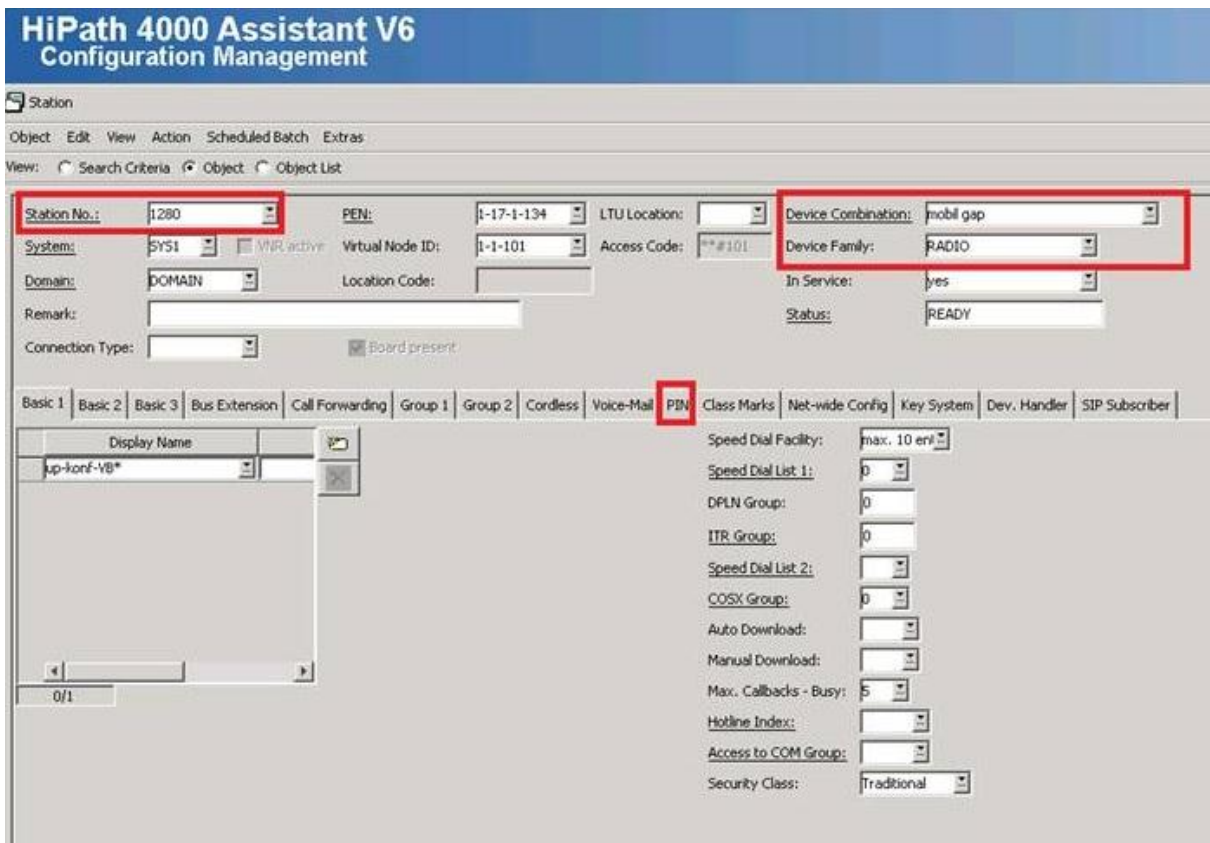

HiPath 4000 Assistant V6 Configuration Management

Station

Object Edit View Action Scheduled Batch Extras

View: Search Criteria Object Object List

Station No.: 1280 PEN: 1-17-1-134 LTU Location: Device Combination: mobil gap

System: SYS1 MNR active Virtual Node ID: 1-1-101 Access Code: **#101 Device Family: RADIO

Domain: DOMAIN Location Code: In Service: yes

Remark: Status: READY

Connection Type: Board present

Basic 1 Basic 2 Basic 3 Bus Extension Call Forwarding Group 1 Group 2 Cordless Voice-Mail PIN Class Marks Net-wide Config Key System Dev. Handler SIP Subscriber

Display Name: up-konf-VB*

Speed Dial Facility: max. 10 en

Speed Dial List 1: 0

DPLN Group: 0

ITR Group: 0

Speed Dial List 2: 0

COSX Group: 0

Auto Download: 0

Manual Download: 0

Max. Callbacks - Busy: 5

Hotline Index: 0

Access to COM Group: 0

Security Class: Traditional